


Slow Adjuster for Bevel-Up Planes, Type B

05P37.13

Some of the planes that use this adjuster have a small set screw holding the standard adjuster assembly in place. This set screw will need to be backed off before the adjuster can be removed.

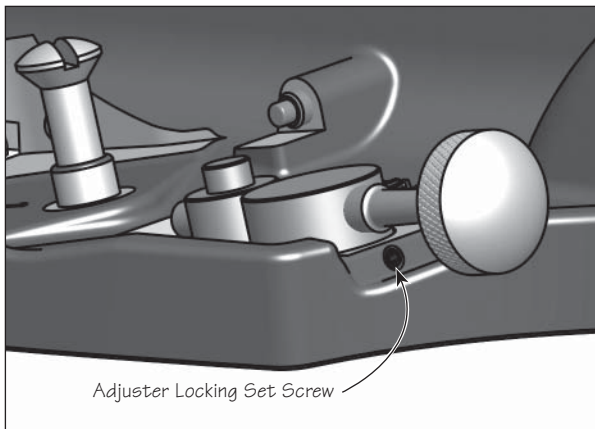

Use a 1/16" hex key to loosen the set screw. Once the slow adjuster has been installed, tighten the set screw back in only as far as the adjuster cannot be removed, but can still pivot freely.